




THE FAIRWAY - Mid Century Modern Bathroom Mirrored Cabinet With LED Lighting

SKU: L-LG02



**FAB GLASS
AND MIRROR**

 www.fabglassandmirror.com  Call: +1 888-474-2221  Fax: (614)-334-4919

 Office Timing: 8:30 - 18:00 EST  info@fabglassandmirror.com


Congratulations on the purchase of your new Glass Cabinet! We've made it very easy to install. Follow all instructions carefully.




CAUTION

Be Careful when using a knife or box cutter to open the packaging. Please read every step in the instructions before you begin installation. You are responsible for assembling, installing and taking care of your Glass Cabinet according to the instructions. Users who fail to heed the instruction run the risk of injury, so please be careful and work with caution.


REQUIRED AND RECOMMENDED TOOLS

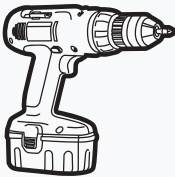

Drill/Driver

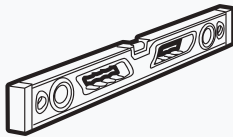

Level

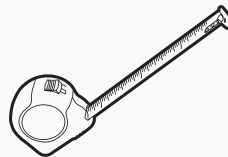

Tape Measure



Lead Pencil

HARDWARE INCLUDED PER YOUR ORDER



Anchor
(Qty - 4)



Screw
(Qty - 4)




Double Sided Tape
(Qty - 2)

1




Remove the cabinet and accessories from the packaging, as per picture.

2

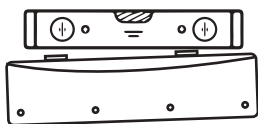


Hang the cabinet wall mount piece on the wall by drilling one screw into the wall.

3

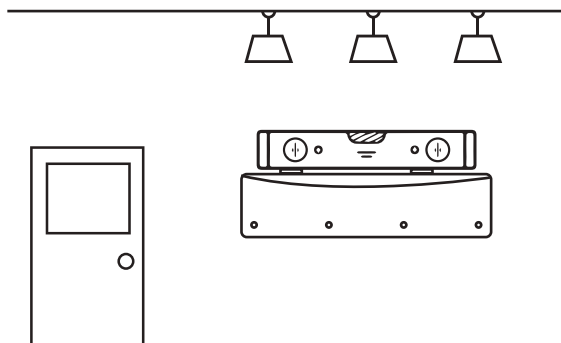


Use a level to check that the wall mount is straight.

4

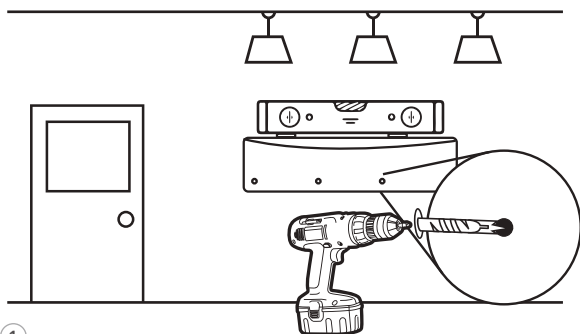


Drill in the remaining screws.

5

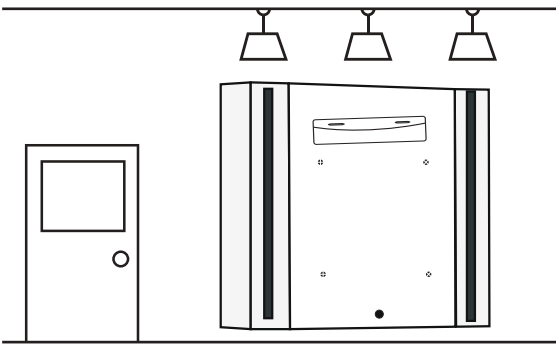


Paste the double-sided tape on the back of cabinet.

6

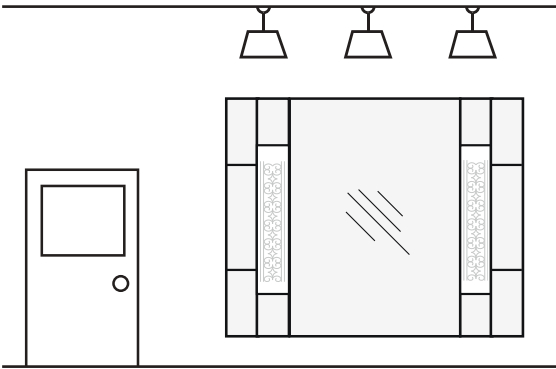


Hang the glass cabinet on the wall mount.

7

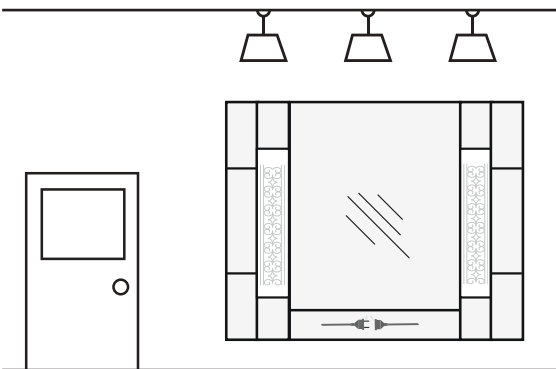

Connect the electric plug for LED lighting.

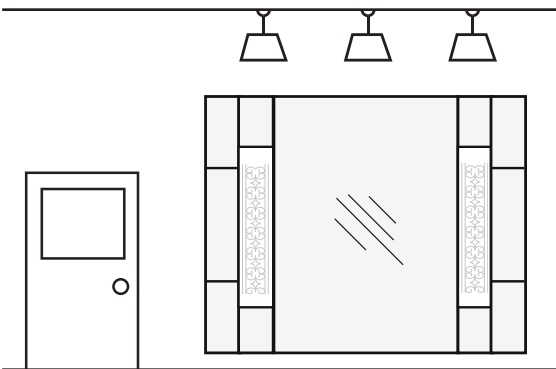

Congratulations!
Your glass cabinet is ready for use!